


Installation / Instalación


1) Turn off water supply. Remove water from tank. Detach water supply.

Extraiga el agua del tanque. Desconecte el suministro de agua.

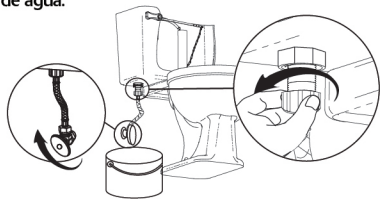


2) Remove nuts, washers, and tank bolts.

Retire las tuercas, las arandelas y los pernos del tanque.

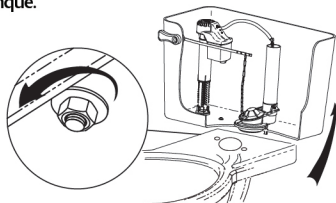

3) Assemble hardware. Alternate tightening each hex nut until tank is stable and level. Use adjustable wrench to tighten hex nuts if needed. Do not continue tightening if tank and bowl touch. Do not overtighten as the tank may crack.

Ensamble los aditamentos. Alterne el apriete de las tuercas hexagonales hasta que el tanque esté estable y nivelado. Utilice una llave inglesa para apretar las tuercas hexagonales de ser necesario. No siga apretando si el tanque y la taza se tocan. No apriete demasiado ya que el tanque podría agrietarse.

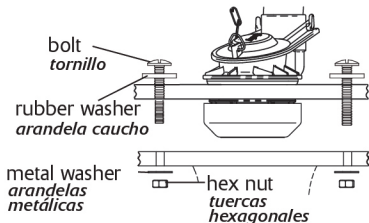

4) Reconnect and turn on water supply.

Vuelva a conectar y abra el suministro de agua.

